



MicroDock II Operating Instructions

1. Ensure that Docking Station is turned on. If not, simply press the far left button under the display for a moment. Docking Station will turn on
2. **Ensure that your Monitor has been turned on for at least two (2) minutes**
3. Place the unit in docking bay and wait for the yellow lights to come on over the word "TEST" on the docking bay.
4. Simply press the button of the function that you wish to perform (Bump Test or Calibration).
5. Once completed look for the "PASS" or "FAIL" lights on both the docking bay and the Base Station.
6. **Wait for the Docking Station to complete its purge. This will be displayed on the screen. DO NOT TAKE UNIT OUT OF THE DOCKING BAY UNTIL THE DISPLAY IS FINISHED THE PURGE AND READS "OK"!**
7. Once completed and display reads "OK", AND you passed your BUMP or Calibration, then it is OK to remove your Micro.
8. If you fail either one of these functions, attempt a calibration (again). If the subsequent calibration fails, notify the proper personnel.

If you have any questions or are experiencing problems with this unit please contact ElectroGas Monitors at 1-866-341-6167. Thank you

[#1, 7961 - 49 Avenue, Red Deer, Ab. T4P 2V5](mailto:info@electrogasmonitors.com)
[Phone: \(403\) 341-6167](tel:(403)341-6167) • [Fax: \(403\) 341-3401](tel:(403)341-3401)
www.electrogasmonitors.com • info@electrogasmonitors.com